



DEMEX



SÄTT GRÄNSER

Programming Procedure Code Lock



För service och underhåll ring:

Direkt: 042-490 48 83

Mob: 0723-70 90 00



Programming procedure in PROFESSIONAL mode

In PROFESSIONAL mode all functions can be managed directly on the keyboard; several combinations can be entered as well as other specific functions. A minimum of 1 to a maximum of 9 characters can be used for the combinations. Every time a character is entered using the keyboard an acoustic tone is emitted.

A „programming password“ must be entered in order to access the programming functions. This is composed of 7 characters and can be modified (see paragraph 1.1). This factory password is **0333333**.

This password is indispensable for all programming phases; therefore do not forget it, otherwise the memory must be deleted.

Below find the description of the programming procedures for just one command or for both commands. Note - The keyboard emits 3 acoustic tones at the end of any procedure providing that it has been carried out correctly.

Recommendation - At the end of programming it is necessary to check correct functioning of the MOTB.

1.1. Procedure for programming a combination

Procedure for the „◀“ command (1)

01. Enter programming password
02. Press the ▶ key to confirm the password
03. Enter 1 to select the type of operation
04. Press the ▶ key to confirm
05. Enter desired combination
06. Press the ▶ key to confirm
07. Enter the same combination again
08. Press the ▶ key to confirm

Procedure for the „▶“ command (2)

01. Enter programming password
02. Press the ▶ key to confirm the password
03. Enter 2 to select the type of operation
04. Press the ▶ key to confirm
05. Enter desired combination
06. Press the ▶ key to confirm
07. Enter the same combination again
08. Press the ▶ key to confirm

Procedure for the „◀“ and „▶“ command (1-2)

01. Enter programming password
02. Press the ▶ key to confirm the password
03. Enter 12 to select the type of operation
04. Press the ▶ key to confirm
05. Enter desired combination
06. Press the ▶ key to confirm
07. Enter the same combination again
08. Press the ▶ key to confirm

1.2. Procedure for changing the „programming password“

If the factory-set „programming password“ must be modified, only the new password will be accepted for all successive programming operations.

Note - The password can be modified at any time as long as the current password is known.

Procedure (3)

01. Enter programming password
02. Press the ▶ key to confirm the password
03. Enter 3 to select the type of operation
04. Press the ▶ key to confirm
05. Enter the new password with 7 characters
06. Press the ▶ key to confirm
07. Enter the same combination again (new)
08. Press the ▶ key to confirm

1.3. Procedure for deleting a combination

Procedure for the „◀“ command (4)

With this function it is possible to eliminate a valid combination for command 1; if the combination is valid for both commands, only the combination for command 2 remains valid.

01. Enter programming password
02. Press the ▶ key to confirm the password
03. Enter 4 to select the type of operation
04. Press the ▶ key to confirm
05. Enter the combination to be deleted
06. Press the ▶ key to confirm
07. Enter the same combination to be deleted again
08. Press the ▶ key to confirm



Procedure for changing the type of command associated to a combination

With this function it is possible to change the command assigned to the „◀” and „▶” keys. It is possible to select which command to couple to the pre-selected key, among those available in **table 2**. Some commands could be different with respect to the control unit to which the keyboard is connected. During the execution of the procedure, press the „P” key to select a new command (every time the key is pressed during the procedure it allows to select the successive command present in **table 2**). Respect the maximum time of 10 seconds between one entry and the next, otherwise the previous command is reconfirmed and the procedure must be repeated.

Table 2

| N of flashes | Command |
|-------------------|-------------------------------------|
| 1 flash + pause | Step-by-step (“◀”, factory-setting) |
| 2 flashes + pause | Opening |
| 3 flashes + pause | Closing |
| 4 flashes + pause | Partial open (“▶”, factory-setting) |
| 5 flashes + pause | Stop |
| 6 flashes + pause | Courtesy lamp |

Procedure for the „◀” command

01. Introduce a valid combination for the current command
02. Press the ◀ key. The „L1,” flashes followed by a pause depending on the control set
03. Press the „P” key to select the desired command
04. Press the ◀ key to confirm

Procedure for the „▶” command

01. Introduce a valid combination for the current command
02. Press the ▶ key. The „L1,” flashes followed by a pause depending on the control set
03. Press the „P” key to select the desired command
04. Press the ▶ key to confirm

